

Lexus Personalized Settings

Your vehicle includes a variety of electronic features that can be programmed to your preferences. Programming of these features is performed once at no charge by your Lexus Dealer provided you obtain the service at the 6 month/5,000-mile scheduled maintenance service.



It is also possible to customize certain vehicle features yourself using the "DISP" switch.

Vehicles without Navigation system:

STEP 1

Press the switch several times until the SETTINGS screen appears. Press and hold the switch to display the customize mode screen.

STEP 2

 

 

 

 






 

 

 



Press the switch again and highlight VEHICLE from the list. Press and hold the switch to view the customization options.

 

 


















Please refer to the 2011 CT 200h Quick Guide, or Owner's Manual for more information on how to operate the "DISP" switch.











Vehicle must be in "ON" mode to program personalized settings.





		Settings that can be customized by:	
		Using the "DISP" switch	Dealer
1. Speed Sensitive Auto Lock When the vehicle reaches 13 mph: <input type="checkbox"/> The doors will not lock. (Standard) = Off <input type="checkbox"/> All the doors will automatically lock. = On			
2. Shift-Linked Automatic Lock When the vehicle is taken out of park and placed into another range: <input type="checkbox"/> The doors, if unlocked, will not automatically lock. = Off <input type="checkbox"/> The doors automatically lock. (Standard) = On			
3. Driver Door-Linked Unlock When the vehicle is turned off and the driver door is opened within 10 seconds: <input type="checkbox"/> All of the remaining doors will remain locked. (Standard) = Off <input type="checkbox"/> All of the remaining doors will automatically unlock. = On			
4. Lock Feedback Volume When the lock button is pressed on the electronic key, the system volume can be programmed as follows: <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> loudest (standard) </div> <div style="text-align: center;"> volume 6 </div> <div style="text-align: center;"> volume 5 </div> <div style="text-align: center;"> volume 4 </div> <div style="text-align: center;"> volume 3 </div> <div style="text-align: center;"> volume 2 </div> <div style="text-align: center;"> volume 1 </div> <div style="text-align: center;"> off </div> </div>			
5. Lock/Unlock Answer Back Using the electronic key, the following functions can be programmed: <input type="checkbox"/> Press the lock/unlock button and the system will not beep. = Off <input type="checkbox"/> Press the lock/unlock button and the system will beep. (Standard) = On			

LPS options were correct at time of development. All options are subject to change without prior notice.

		Settings that can be customized by:	
		Using the "DISP" switch	Dealer
6. Auto Relock Time Adjustment When the unlock button on the electronic key is pressed and the doors are not opened: <input type="checkbox"/> The doors will automatically re-lock in 30 seconds. <input type="checkbox"/> The doors will automatically re-lock in 60 seconds. (Standard) <input type="checkbox"/> The doors will automatically re-lock in 120 seconds. <input type="checkbox"/> 0 seconds.			
7. Select Doors to Unlock When pressing the unlock button one time on the electronic key: <input type="checkbox"/> All doors will unlock (Option # 8 Remote 2-Press Unlock must be Off). = All <input type="checkbox"/> Only driver door unlocks (Option # 8 Remote 2-Press Unlock must be On). (Standard) = Driver			
8. Remote 2-Press Unlock When using the electronic key to unlock the doors: <input type="checkbox"/> Pressing the unlock button one time will unlock all doors. = Off <input type="checkbox"/> Pressing the unlock button one time unlocks the driver door, and two times unlocks all doors. (Standard) = On			
9. Headlight Off Time Adjustment After turning off the ignition and all the doors are closed, if the headlights are ON or in the AUTO position: <input type="checkbox"/> The headlights will turn off immediately, when the vehicle is turned off and the driver door is opened. <input type="checkbox"/> The headlights will turn off in 30 seconds. (Standard) <input type="checkbox"/> The headlights will turn off in 60 seconds. <input type="checkbox"/> The headlights will turn off in 90 seconds.			
10. Light Sensor Sensitivity When driving the vehicle, the front headlights can be programmed to turn ON under darker or lighter ambient light conditions. (Headlight switch must be in "AUTO" mode): <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  very dark </div> <div style="text-align: center;">  dark </div> <div style="text-align: center;">  normal (standard) </div> <div style="text-align: center;">  light </div> <div style="text-align: center;">  very light </div> </div>			
11. Daytime Running Lights Illumination of daytime running lights: <input type="checkbox"/> OFF. <input type="checkbox"/> ON. (Standard)			
12. Interior Lights Off Time Adjustment After closing the door, the interior lights can be adjusted to stay on for the following: <input type="checkbox"/> 15 seconds. (Standard) <input type="checkbox"/> 7.5 seconds. <input type="checkbox"/> 30 seconds. <input type="checkbox"/> 0 seconds.			
13. Exterior Lights Off Time Adjustment After closing the door, the exterior lights can be adjusted to stay on for the following: <input type="checkbox"/> 15 seconds. (Standard) <input type="checkbox"/> 7.5 seconds. <input type="checkbox"/> 30 seconds. <input type="checkbox"/> 0 seconds			

		Settings that can be customized by:	
		Using the “DISP” switch	Dealer
14. Access System with Elec. Key When unlocking the doors: <input type="checkbox"/> Deactivates SmartAccess, only accessible using elec. key unlock button. = Off <input type="checkbox"/> Use SmartAccess (touch door handle) or remote buttons. (Standard) = On			
15. Auto A/C Mode When Auto A/C is selected: <input type="checkbox"/> It will automatically engage the air conditioner compressor to reach the set temperature. (Standard) = On <input type="checkbox"/> It will automatically achieve a set temperature, warm or cool, without engaging the air conditioner compressor.* = Off * Note: The AC compressor will be engaged when the auto AC button is pressed a second time.			
Programmable by Dealer Only			
16. Shift-Linked Auto Unlock When the engine is running and the vehicle is placed into park: <input type="checkbox"/> All the doors will remain locked. = Off <input type="checkbox"/> All the doors will automatically unlock. (Standard) = On		—	 Dealer only
17. Unlock on Second Key Turn When using the mechanical key to unlock the doors: <input type="checkbox"/> Turning the key one time will unlock all doors. = Off <input type="checkbox"/> Turning the key one time unlocks the driver door, and two times unlocks all doors. (Standard) = On		—	 Dealer only
18. Efficient Ventilation Mode When the front defogger is activated: <input type="checkbox"/> It will automatically blow air onto the windshield without engaging the air conditioner compressor. = Off <input type="checkbox"/> It will automatically engage the air conditioner compressor to blow air onto the windshield. (Standard) = On		—	 Dealer only
19. Instrument Dim. Sensitivity Level of light required to dim the instrument panel lights: <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> very dark</div> <div style="text-align: center;"> dark</div> <div style="text-align: center;"> normal (standard)</div> <div style="text-align: center;"> light</div> <div style="text-align: center;"> very light</div> </div>		—	 Dealer only
20. Instrument Rest. Sensitivity Level of light required to brighten the instrument panel lights: <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> very light</div> <div style="text-align: center;"> light</div> <div style="text-align: center;"> normal (standard)</div> <div style="text-align: center;"> dark</div> <div style="text-align: center;"> very dark</div> </div>		—	 Dealer only
21. Flashing of Signal Lights Using the electronic key, the following functions can be programmed: <input type="checkbox"/> Press the lock or unlock button and the lights will not flash. = Off <input type="checkbox"/> Press the lock button and the lights will flash once. Press the unlock button and the lights will flash twice. (Standard) = On		—	 Dealer only
22. Open Windows with Elec. Key When pressing the unlock button on the electronic key for 3 seconds: <input type="checkbox"/> The windows will not roll down. (Standard) = Off <input type="checkbox"/> All the windows will roll down. = On		—	 Dealer only

Settings that can be customized by:	
Programmable by Dealer Only (cont'd)	Using the "DISP" switch Dealer
23. Open windows warning* When pressing the unlock button on the electronic key for 3 seconds to roll down the windows: <input type="checkbox"/> The buzzer will not sound. = Off <input type="checkbox"/> The buzzer will sound. (Standard) = On * Option #22 must be on.	 Dealer only
24. Opening windows using key When using the mechanical key to operate the windows: <input type="checkbox"/> Turning the key right and holding the position for 2 seconds will not open the windows. (Standard) = Off <input type="checkbox"/> Turning the key right and holding the position for 2 seconds will open the windows. = On	 Dealer only
25. Closing windows using key When using the mechanical key to operate the windows: <input type="checkbox"/> Turning the key left and holding the position for 2 seconds will not close the windows. (Standard) = Off <input type="checkbox"/> Turning the key left and holding the position for 2 seconds will close the windows. = On	 Dealer only
26. Automatic recirculation of air when using A/C When the air conditioner is ON or in AUTO, the vehicle can be programmed for the following: <input type="checkbox"/> To automatically switch between the recirculation mode and fresh air mode as necessary to meet the temperature requirement set. (Standard) = On <input type="checkbox"/> When the climate control is turned on, the user must manually select the desired mode, recirculation or fresh air mode. = Off	 Dealer only
27. Interior light The interior light will illuminate when POWER is switched to OFF. <input type="checkbox"/> On. (Standard) <input type="checkbox"/> Off.	 Dealer only
28. Illumination of the interior cabin light when unlocking door When using the electronic key or mechanical key to unlock the door, the interior cabin light can be programmed for the following: <input type="checkbox"/> The cabin light will illuminate. (Standard) = On <input type="checkbox"/> The cabin light will not illuminate. = Off	 Dealer only
29. Illumination of the interior cabin light when approaching the vehicle When approaching the vehicle with the electronic key, the interior cabin light can be programmed for the following: <input type="checkbox"/> The cabin light will illuminate. (Standard) = On <input type="checkbox"/> The cabin light will not illuminate. = Off	 Dealer only
30. Cup holder light The cup holder will illuminate when POWER is in ACCESSORY or ON mode: <input type="checkbox"/> On. (Standard) <input type="checkbox"/> Off.	 Dealer only
31. Foot lights When using the electronic key to unlock the doors: <input type="checkbox"/> The outer foot lights will illuminate. (Standard) = On <input type="checkbox"/> The outer foot lights will not illuminate. = Off	 Dealer only
32. Panic mode When pressing the panic button on the electronic key: <input type="checkbox"/> The alarm will sound intermittently and the vehicle lights will flash. (Standard) = On <input type="checkbox"/> The alarm will not sound and the vehicle lights will not flash. = Off	 Dealer only

Programmable by Dealer Only (cont'd)	Settings that can be customized by:	
	Using the "DISP" switch	Dealer
33. Door lock buzzer When the lock button on the electronic key is pressed and a door is not fully closed: <input type="checkbox"/> The buzzer will sound. (Standard) = On <input type="checkbox"/> The buzzer will not sound. = Off	—	 Dealer only
34. Driver seat belt reminder When the vehicle reaches 12mph: <input type="checkbox"/> The driver seat belt reminder will beep. (Standard) = On <input type="checkbox"/> The driver seat belt reminder will not beep. = Off	—	 Dealer only
35. Passenger seat belt reminder When the vehicle reaches 12mph: <input type="checkbox"/> The passenger seat belt reminder will beep. (Standard) = On <input type="checkbox"/> The passenger seat belt reminder will not beep. = Off	—	 Dealer only
36. Reverse beep alert When the vehicle is put in reverse, the interior reverse beep alert can be set to the following: <input type="checkbox"/> Beep continuously. (Standard) = On <input type="checkbox"/> Beep once. = Off	—	 Dealer only

Date _____ Customer Signature _____

Repair Order Number (Dealer only) _____

Vehicle Identification Number (Dealer only) _____