

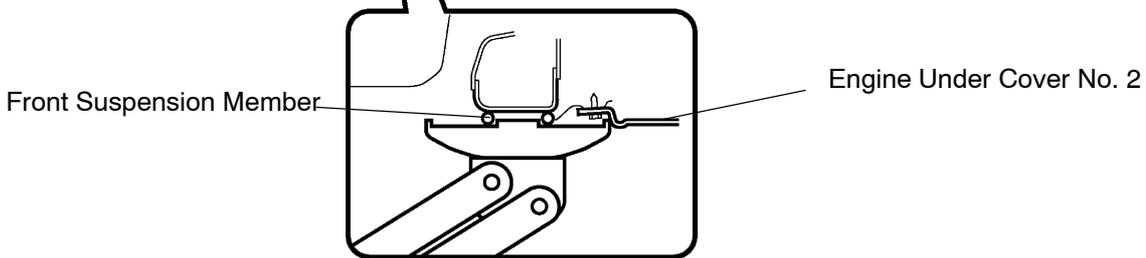


VEHICLE LIFT AND SUPPORT LOCATIONS

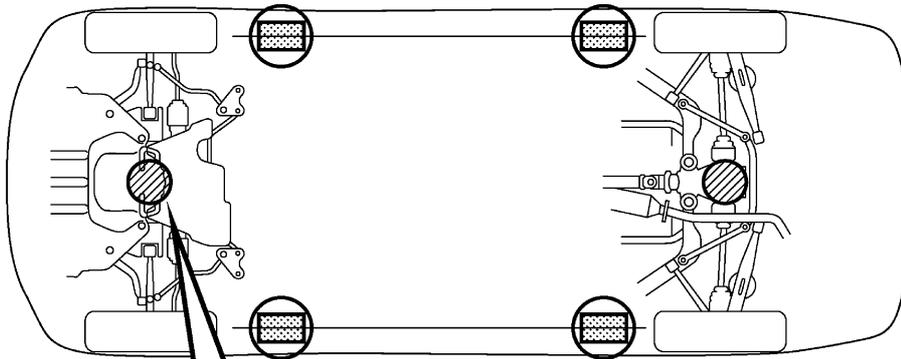

NOTICE:
 Never place the engine under cover No. 2 on the garage jack.

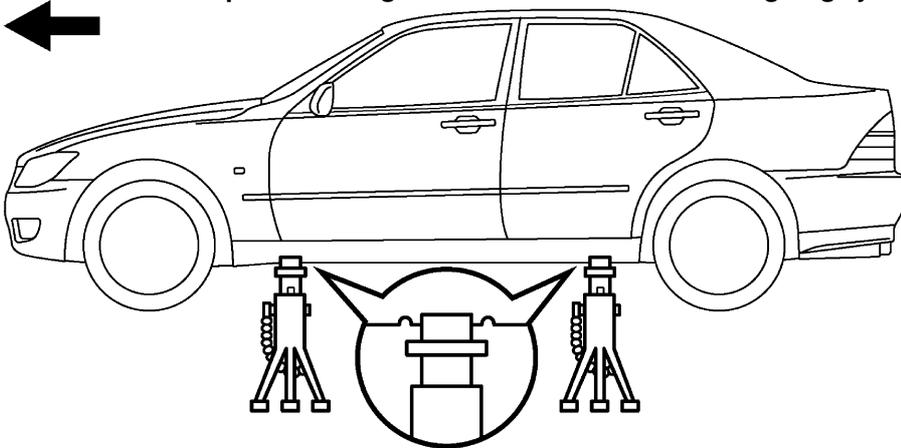

JACK POSITION

- Front - - - - - Front suspension member
- Rear - - - - - Differential carrier



CAUTION : When jacking-up the front and rear, make sure the vehicle is not carrying any extra weight.

PANTOGRAPH JACK POSITION




SUPPORT POSITION

- Safety stand and swing arm type lift - - - - -



Plate type lift

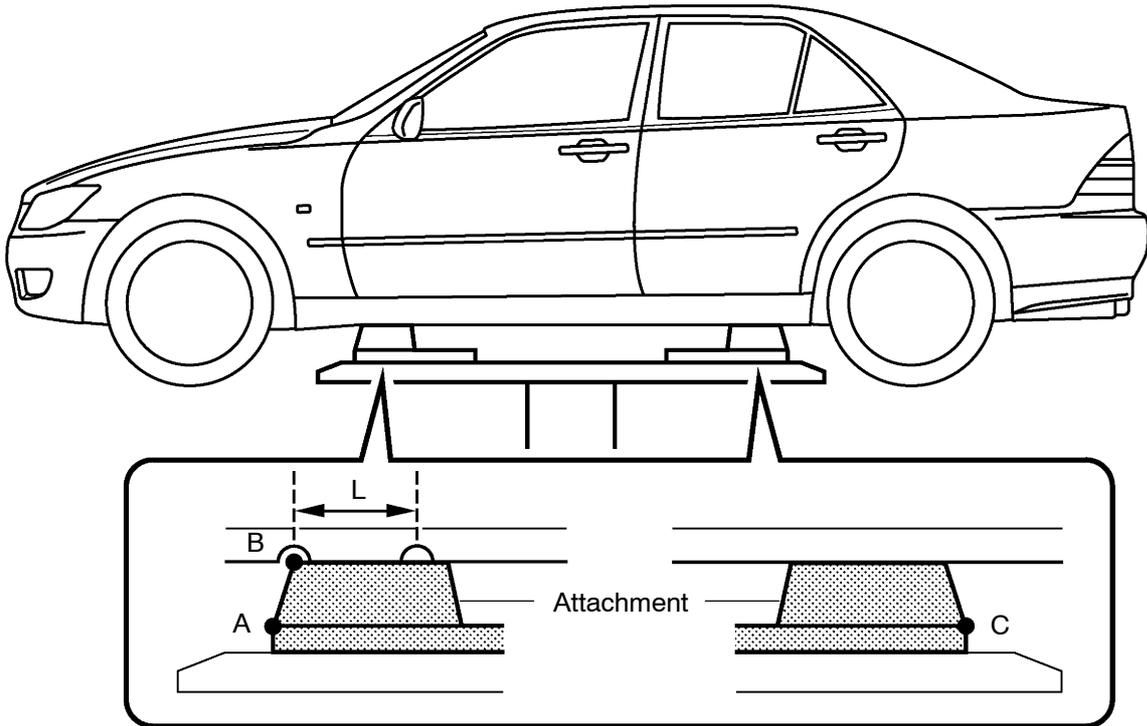

HINT :

- | | |
|-----------------------------|--|
| Right and left set position | Place the vehicle over the center of the lift. |
| Front and rear set position | <ul style="list-style-type: none"> ● When using attachments, place the one for front side vertically and the one for rear side horizontally to the vehicle. ● Align the cushion gum ends of the plate with the attachment lower ends (A, C). ● Align the attachment upper end (B) with the rocker flange rear side notch. |

NOTICE :

Check the interference of the attachment with the front floor cover when placing the attachment on the plate.

Attachment dimensions

